
GTR198 Gate Warning light user manual


I. Safety Instruction

- 1. For security, please read the user manual carefully before initial operation;
- 2. Please be sure the power is off before connecting, the product is produced without fuse;
- 3. This product is only used for the equipment which will not cause life or property hazards when a breakdown happens or its security risks have been already eliminated

II. Technical Specification

- 1. Working voltage: 85-265VAC or 12-24VAC/DC
- 2. Loading capacity: <5W
- 3. Flicker Frequency: 1HZ
- 4. Working temperature:
- 5. IP Level: IP54
- 6. Size: φ90* 125mm
- 7. Weight: 159g

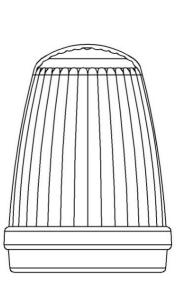

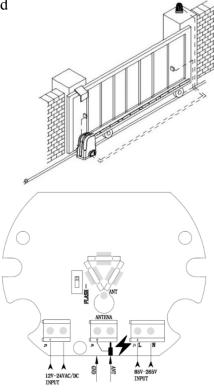

III. Connecting Instruction

- 1. Connect the wire with J1 if power supply is 85-265VAC
- 2. Connect the wire with J2 if power supply is 12-24VAC/DC
- 3. J3 is for connecting the antenna to extend the effective distance of controller
- Note: 1. Connect J1 or J2, can't connect both 2. J3 should be connected with shielding line

IV. Instructions

- 4.1 LED will flicker in 1HZ after power on
- 4.2 JP2 switch

It's the switch for switching LED in flickering or lighting,

When JP2 at FLASH, LED will flicker in 1Hz after power on;

When JP2 at NO FLASH, LED will light after power on

V. Installation

