



GTR053 Wireless Keypad Instruction Manual



Please note: This product is compatible with **GTR061, GTR064, GTR156, GTR212, and GTR207** gate motors.

How to pair the keypad to your gate opener:

1. Press the “LEARN” button on the Control Board of your Gate Opener until the LED on the control board lights up.

Please note: the learn button must be released as soon as the LED on the control board lights up. If the button is held for too long it will erase all remotes paired to the gate opener.

2. Press button ‘A’ twice. Enter the default password ‘000000’.

3. The “LEARN” LED will start to flash and then turn off.

4. The keypad has now been paired

5. To open the gate, input password (default password is 000000) and press button ‘A’.

How to pair the keypad to a second gate or add a second code

1. Press the “LEARN” button on the Control Board of your Gate Opener until the LED on the control board lights up.

Please note: the learn button must be released as soon as the LED on the control board lights up. If the button is held for too long it will erase all remotes paired to the gate opener.

2. Press button ‘B’ twice. Enter the default password ‘000000’.

3. The “LEARN” LED will start to flash and then turn off.

4. The keypad has now been paired.

5. To open the gate, input password (default password is 000000) and press button ‘B’.

How to change password A

1. Press and hold button A for 4 seconds

2. Input the old password and press A

3. Input the new 6-digit password and press A

4. Input the new 6-digit password again, and press A

7. The password has now been changed.

How to change password B

1. Press and hold button B for 4 seconds

2. Input the old password and press B

3. Input the new 6-digit password and press B

4. Input the new 6-digit password again, and press B

7. The password has now been changed.

GTR053 Fitting Instructions


Remove the GTR053 from the box.



Insert the key and turn clockwise to unlock the front panel.



Lift the front panel, including the rubber seal away from the locking plate.

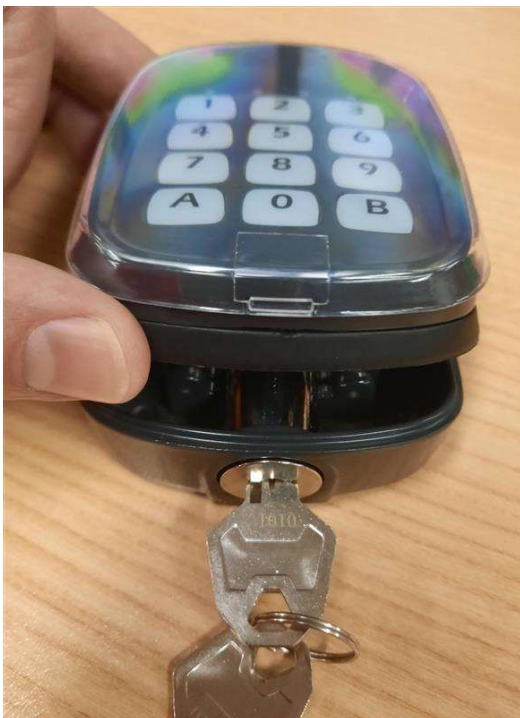

Locate and drill the mounting holes. Once secured, replace the front panel and turn key counter-clockwise to secure.

