

WYKAZ ZGODNOŚCI Z NORMAMI UEN

IPLI DEKLARACJA ZGODNOŚCI Z NORMATYWAMI
Sygnatariusz pochwala i informuje, że wyszczególniona maszyna odpowiada dyrektywie europejskiej 2006/42/WE (Dyrektywy Unijnej) i jest zgodna z kryteriami bezpieczeństwa i zdrowia określonymi w dyrektywie. Wdrożenie dyrektywy do prawa krajowego zostało zrealizowane za pomocą dokumentacji technicznej.

EC DECLARATIE DE CONFORMITATE CE

[RO] DECLARAȚIE DE CONFORMITATE
Subsemnatul avizat că prezentul cuvântare de mașină, descris individual, corespunde directivelor europene 2006/42/CE (Directiva privind mașinile) inclusiv modificările lor, precum și actualui legislativ corespunzător pentru transpunerea directivelor în dreptul național. Semnatul sunt și adăugat în evidență documentația tehnică.

Приложение 5. Критерии соответствия стандартам ЕС

[RUS] Декларация соответствия стандартам
Настоящим лицо, подлиннике документ, удостоверяют, что машина в указанной спецификации соответствует Европейскому стандарту EN ISO 14001:2004 и директиве 2006/42/EG (Директива по машинам), включая изменения в них, а также соответствующему правовому документу по принятию/пересмотру в инцидентном Принце. Клиент, горячей отдельности лица, подписавшее документ, имеет полномочия для составления токсикологической документации.

[S] EK-KONFORMITETSFORKLARING

Undertecknad intygar härmed att den specificerade maskin är tillverkad i överensstämmelse med de tekniska krav som finns i den nationella rättsliga förordningen om maskiner (Maskindirektivet), inklusive förslagen i dessa och motsvarande harmoniseringar i nationell rätt. Undertecknade är var och en för vilj hörde till företaget förtroende från tekniskt dokumentet.

[Znovu využít sponzora](#)

[SK] VYHĽADANIA A PODPIS
Podplňte osoby číslované predtým, že podrobne popísaný stroje zodpovedá európskym smernicam zabezpečenia bezpečnosti. Podplňte ich záznam, aby aj pri budúcom právnom výnosu na uplatnenie smerícich v národnom práve. Podpisane osoby sú vždy jednotlivci, v ktorých sa nachádzajú plnomožnosti technickej dokumentácie.

PRÍLOHA 10. ZOSILŇOVANIE TECHNICKÉJ DOKUMENTÁCIE

[SLO] EU IZJAVA O SKLADNOSTI
Podpisnik je potrdiljivo, da podloženo opisano gibanje stroj usstreza Evropski direktivi 2006/42/ES (Direktiva o strojih), vključno z njenim splošnim dokumentom o izvajanjih na podlagi katerih se izvaja skladnost.

[TB1] AB Hukumîlik Açıklaması


İmza ve Onaylıluk
İmza ve onaylılık bir yazının belirli makinelerde istifası aracılıkla Avrupa Yönetmeliğine 2006/14/EC (Makine Yönetmeliği) yineleme yoluyla yürürlüğe konulmasıdır. Bu makine, onaylılığından sonra, onaylılığını taşıyan onaylı makine üreticisi tarafından onaylılığını yürürlüğe konulmuştur.

If you can read this text:

- Your truck might be sold outside the EU; this declaration is then not valid.
 - Or the declaration is not complete.
In this case please ask for a copy

INSTRUCTION HANDBOOK

Manual Lifting Table

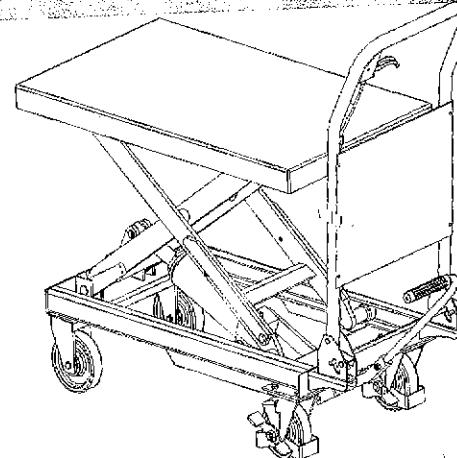

WARNING

WARNING
Do not use the lifting table before reading and understanding these operating instructions.

NOTE:

- Please check the designation of your present type at the last page of this document as well as on the ID-plate.
 - Keep for future reference.

FOREWORD

Before operating the lifting table, read this ORIGINAL INSTRUCTION HANDBOOK carefully and understand the usage of the lifting table completely. Improper operation could create danger.

This handbook describes the usage of different lifting tables. When operating and servicing the lifting table, make sure, that it applies to your type.

Keep this handbook for future reference. If this or the warning/ caution labels are damaged or got lost, please contact your local dealer for replacement.

ATTENTION:

- Environmentally hazardous waste, such as oil, will have a negative effect on the environment, or health, if handled incorrectly.
- The waste packages should be sorted and put into solid dustbins and be collected disposal by local special environment protection bureau. To avoid pollution, it's forbidden to throw away the wastes randomly.
- To avoid leaking during the use of the products, the user should prepare some absorbable materials (scraps of wooden or dry duster cloth) to absorb the leaking oil in time. To avoid second pollution to the environment, the used absorbable materials should be handed in to special departments in terms of local authorities.
- Our products are subject to ongoing developments. Because this handbook is only for the purpose of operating /servicing the lifting table, therefore please have understanding, that there is no guarantee out of particular features out of this handbook.

NOTE: On this manual, the left sign means warning and danger, which can lead to death or serious injury if not followed.



CAUTION means danger which can lead to slight injury or property damage.

Copyright

The copyright remains with the company, mentioned on the CE- certificate at the end of this document.

TABLE OF CONTENTS

1. CORRECT APPLICATION	3
2. DESCRIPTION OF THE LIFTING TABLE.....	4
a. Overview of the main components.....	4
b. Main technical data	5
c. Description of the safety devices and warning labels.....	6
d. Identification plate	7
3. WARNINGS AND SAFETY INSTRUCTIONS	7
4. COMMISSIONING, TRANSPORTING, STORAGE/ REASSEMBLING	8
a. Commissioning	8
b. Transporting.....	8
c. Storage/ Reassembling.....	8
5. DAILY INSPECTION	9
6. OPERATING INSTRUCTIONS	9
a. Parking.....	9
b. Lifting.....	10
c. Working at Height	10
d. Lowering	11
e. Moving	11
f. Malfunctions.....	11
g. Emergency.....	11
7. REGULAR MAINTENANCE.....	11
8. TROUBLE SHOOTING	12
9. HYDRAULIC CIRCUIT	13
10. DECLARATION OF CONFORMITY (valid, if sold within the EU).....	14

1. CORRECT APPLICATION

It is only allowed to use this lifting table according to this instruction handbook.

This table is a mobile lifting table designed to lift or lower the rated load. Do not use this table for other purpose than its intended use.

A wrong usage can cause human injuries or can damage equipment.

The operator/ the operating company has to ensure the correct usage and has to ensure, that this table is used only by staff, which is trained and authorized to use this table.

The table has to be used on substantially firm, smooth, level and prepared surfaces. Driving with the load lifted is not allowed. The load must be placed approximately on the longitudinal centre plane of the table. The capacity is marked on capacity sticker as well on the identification plate. The operator has to consider the warnings and safety instructions.

The table is intended to be used for indoor applications with ambient temperatures between +5°C and + 40°C. Operating lighting must be minimum 50 Lux.

Modification

No modifications or alterations to this lifting table which may affect, for example, capacity, stability or safety requirements of the truck, shall be made without the prior written approval of the original truck manufacturer, its authorized representative, or a successor thereof. This includes changes affecting, for example braking, steering, visibility and the addition of removable attachments. When the manufacturer or its successor approve a modification or alteration, they shall also make and approve appropriate changes to capacity plate, decals, tags and operation and maintenance handbooks.

By not observing these instructions, the warranty becomes void.

2. DESCRIPTION OF THE LIFTING TABLE

a. Overview of the main components

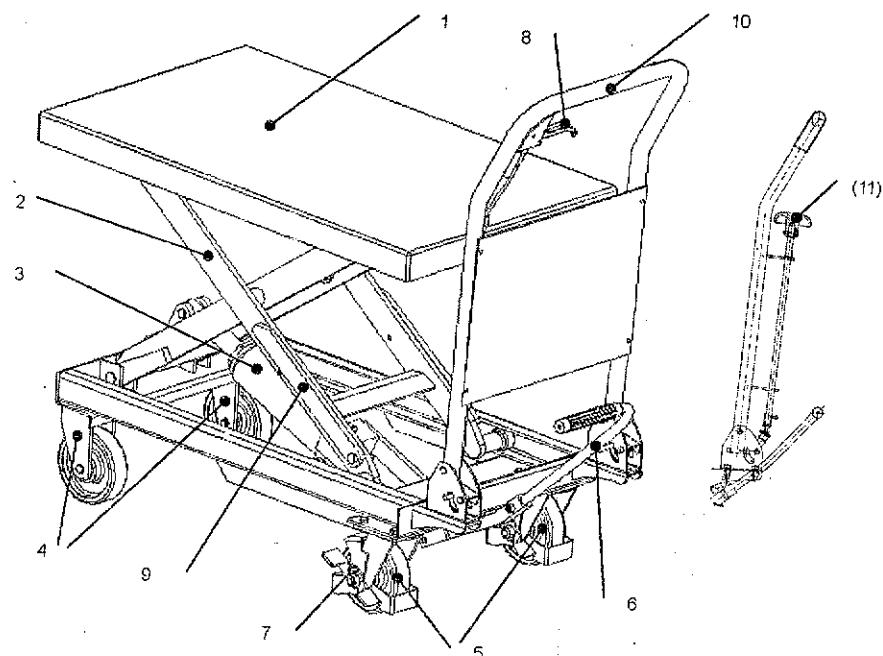


Fig. 1: Overview

- | | | | |
|---|--------------------|------|------------------------------------|
| 1 | loading platform | 7 | Parking brake |
| 2 | Lift mechanism | 8 | 'Lowering lever |
| 3 | Hydraulic cylinder | 9 | Safety mechanism (metal bar) |
| 4 | Castors | 10 | Pushing/ Pulling bracket |
| 5 | Steering castors | (11) | Lowering turning handle (optional) |
| 6 | Foot pedal | | |

b. Main technical data

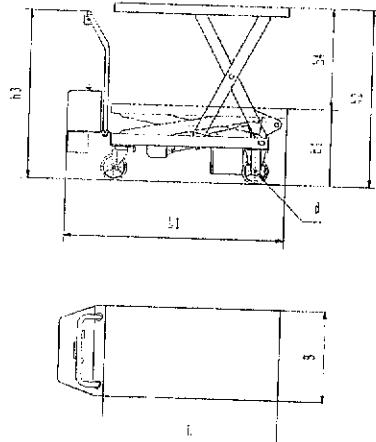


Fig. 2: Technical data

Table 1: Main technical data for standard version

TYPE		TF15	TF 30	TF 50	TF75	TF100	TFD35	TFD70	TG50	TG100
Capacities	kg	150	300	500	750	1000	350	700	500	1000
Max. table height	h ₂ mm	720	880	880	990	990	1300	1500	915	1360
Min. table height	h ₁ mm	220	285/310	285/340	420	380	355	445	290	360
Tablet platform size	(LxW) mm	700x450	815x500 /850x500	815x500 /850x500	1000 x510	1016x510	910x500	1220x610	1600x810	2035x750
Castor / wheel	Ø x w mm	Ø100 x25	Ø125 x40	Ø125 x40	Ø147 x50	Ø125 x50	Ø125 x40	Ø125 x40	Ø180x50/ Ø180x40	
Overall length	L ₁ mm	908	1060	1060	1330	1330	1140	1460	1832	2146
Handle height	h ₃ mm	950	990	990	990	980	975	1015	975	1000
Vertical lifting	h ₄ mm	500 ≤40/500	540/590	570	610	945	1055	625	1000	
Foot pedal cycles to max. height		≤98	≤27	≤27	≤45	≤62	≤53	≤97	≤55	≤200
Net weight	kg	46	77	81	125	140	105	195	156	350

c. Description of the safety devices and warning labels

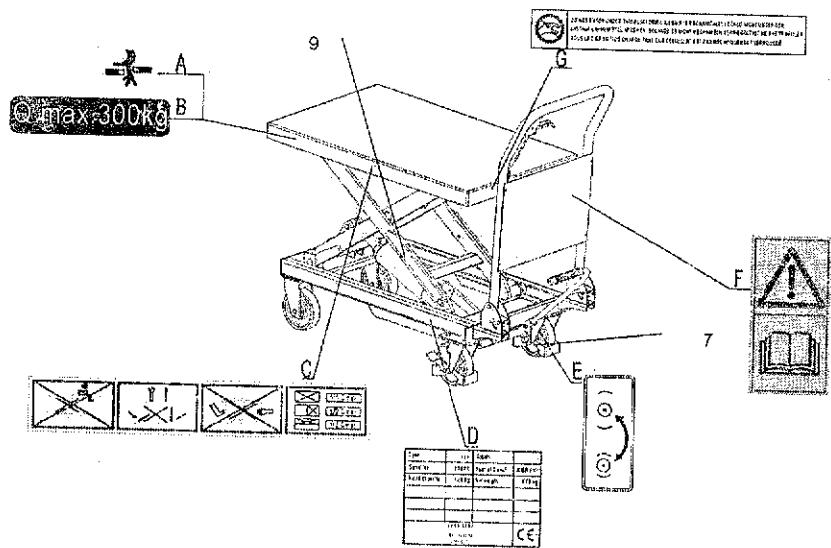


Fig. 3: Safety and warning labels

- A Sticker finger shearing and crushing (both sides)
- B Capacity sticker (both sides, sample for illustration only, capacity might be different)
- C Prohibited and capacity

positioning decal (both sides)
D Identification plate (ID-plate)
E Brake sticker
F Sticker to read this instruction
G Prohibit decal

The safety bar (9) must be folded out after the platform is lifted to ensure that neither crushing nor shearing risk can arise from unintended lowering or malfunctions. Before lowering it must be back into its initial position.

If there arise any malfunctions, if possible lower the lifting table carefully and activate the parking brake (7). Should it be not possible, remove the load on the table by using designated lifting equipment.



DO NOT ENTER UNDER THIS PLATFORM UNLESS IT IS MECHANICALLY LOCKED

d. Identification plate

- | | |
|--|----------------------|
| 1 Designation, type | 5 Net weight |
| 2 Serial number | 6 Manufacturing date |
| 3 Rated capacity | 7 Option |
| 4 Name and address of the manufacturer | |

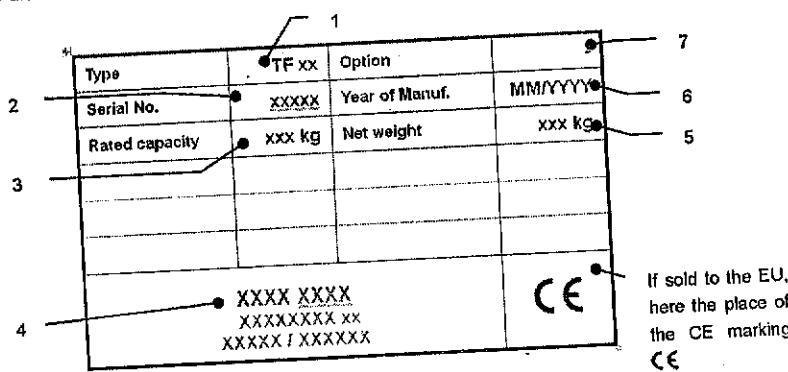


Fig. 4: Identification plate

3. WARNINGS AND SAFETY INSTRUCTIONS



DO NOT

- Put foot or hand in the scissors lifting mechanism.
- Allow other person than the operator to stand in front of or behind the table when it is moving or lifting/lowering.
- Move the table when table is in raised position. Load could fall down.
- Enter under table.
- Overload the table.
- Put foot in front of rolling wheel, Injury could result.
- Use the table on a slope or inclined surface, the table may become uncontrollable and create danger.
- Lift people. People could fall down and suffer severe injury.

Watch difference in floor levels when moving the lifter. Load could fall down or the lifting table could get uncontrollable.
Do Read "Caution" on the case of power pack of the lifter, before daily operation.



Do Not

- Lower table too fast. Load could fall down and create danger. Lower speed controller is available for safety purpose.
- Side or end load. Load must be distributed on at least 80% of table area.
- Use table with unstable, unbalanced loosely stacked load.
- Use table without manufacturer's written consent.

Keep watching the condition of load. Stop operating table if load becomes unstable. Brake table with the parking brake (7) when sliding load on or off table.

Practice maintenance work according to regular inspection.

This table is not designed to be water resistant. Use table under dry condition.

Stop operation if temperature of hydraulic oil is too high.

4. COMMISSIONING, TRANSPORTING, STORAGE/ REASSEMBLING

a. Commissioning

For the commissioning following information are for interest:

Table 2: Commissioning data

Type	TF15	TF 30	TF 50	TF 75	TF 100	TFD35	TFD70	TG50	TG100
Commissioning weight	50 kg	82 kg	86 kg	130 kg	148 kg	110 kg	200 kg	165 kg	360 kg
Dimensions [mm]	830x 460x 300	975x 520x 450	975x 520x 450	1170x 620x 460	1170x 620x 430	1010x 520x 420	1300x 640x 500	1760x 900x 490	2300x 840x 495

After receiving our new lifting table you have to do following before firstly operating the table:

- Check if are all parts included and not damaged
- Installation of the pulling/pushing bracket (10).
- Do the work according to the daily inspections as well as functional checks.

b. Transporting

For transporting, remove the load, lower the table to the lowest position and fix the table lash the table safe with dedicated lashing straps.

c. Storage/ Reassembling

For storage, remove the load, lower the table to the lowest position, grease all in this handbook mentioned greasing points (regularly inspection) and eventually protect the table

against corrosion and dust. Jack the table safety, so that there will be no flattening after storage. For reassembling remove the pushing/ pulling bracket (10) in the opposite way you assembled this before.

5. DAILY INSPECTION

This chapter describes pre-shift checks before putting the truck into operation. Daily inspection is effective to find the malfunction or fault on this table. Check table on the following points before operation.
Remove load from table and when servicing, please use the safety mechanism (9) to prevent table from lowering.



Do not use the table if any malfunction or fault is found.

- Check for scratch, bending or cracking on the table.
- Check if there is any oil leakage from the cylinder.
- Check the vertical creep of table.
- Check the smooth movement of the wheels.
- Check the function of the brake.
- Check if all the bolts and nuts are tightened firmly.
- Check the lifting and lowering conditions by shifting the knob.
- Check if there are broken hoses or broken electric wires by eyes.

6. OPERATING INSTRUCTIONS



- When operating the lifting table, the operator has to wear safety shoes.
- The table is intended to be used for indoor applications with ambient temperatures between +5°C and +40°C.
- The operating lighting must be minimum 50 Lux.
- It is not allowed to use the table on angled surfaces!

a. Parking



Brake the table when not moving it in order to prevent sudden movement.

The brake (7) is equipped with the swivel caster on the right.

- Braking, press the brake pedal (7).
- Releasing, lift up the brake pedal (7).

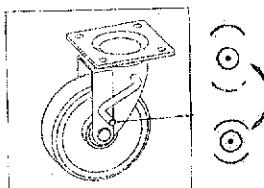


Fig. 5: Parking brake

b. Lifting

- Do not overload table. Stay within the rated capacity.
- Do not side or end load. Load must be distributed on at least 80% of table area (1).
- Prolonged continuous working might cause damage of hydraulic power pack.
- Stop operation if temperature of hydraulic oil is too high.
- Do not lift people. People could fall down and suffer severe injury.
- Lift the load by pedaling the lifting pedal (6) carefully until the desired or maximum lifting height is reached. During lifting don't use the lowering mechanism (8,11).
- Load only the designated capacity, which is :

- TF 15 150 kg
- TF30 300kg
- TF 50 500 kg
- TF75 750kg
- TF100 1000kg
- TFD35 350kg
- TFD70 700kg
- TG50 500kg
- TG100 1000kg



DO NOT OVERLOAD THE TABLE!

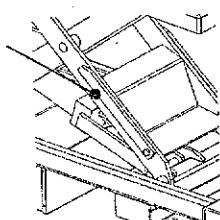


Fig. 6: Safety mechanism

c. Working at Height

- While working at height the safety mechanism (9) must be activated to prevent unintended lowering, which can cause permanent injuries or damages.

If the table is lifted, move/ turn out the safety mechanism (9). Before lowering, turn this metal bar back to its initial position.

d. Lowering

- Do not put foot or hand in scissors mechanism.
- Do not lower table with load too fast and stop suddenly. Impact load could be created and table could be damaged.
- Lower the load by pulling the lowering lever (8) carefully until the desired or lowest position is reached.
- OPTIONAL: Turn the lowering turning handle counter-clockwise until the desired or lowest position is reached.

e. Moving



Do Not

- Move the table on a slope or inclined surface. Lifting table may become uncontrollable and create danger.
- Allow other person stand in front of or behind table when it is moving.
- Move table when table is in raised position. Load could fall down.
- Put foot in front of rolling wheels. Injury could result.
- Move the table if the visibility is insufficient.

Watch difference of floor level when moving lifter. Load could fall down.

- Make the load stable to prevent it from falling down.
- Lower the table down before moving.
- Release the brake (7) and move the table by pushing or pulling the pushing/ pulling bracket (10).
- Keep watching the condition of load. Stop operating the table if load becomes unstable.

f. Malfunctions

If there are any malfunctions or the table is inoperative, please stop using the lifting table. Place the table at a safe place, if possible/necessary activate the safety mechanism (9). Inform against lowering, park the table on a safe area by activating the parking brake (7). Inform immediately the manager and, or call your service.

g. Emergency

In emergencies, stop lifting and lowering and keep safe distance. If possible activate the parking brake.

7. REGULAR MAINTENANCE



- Only qualified and trained personnel are allowed to do service on this lifting table.
- Before servicing the table, remove the load and during servicing use the safety mechanism (9).
- Use approved and from your dealer released original spare parts.
- Please consider that oil leakage of hydraulic fluid can cause failures and accidents.
- It is allowed to adjust the pressure valve only from trained service technicians.

If you need to change the wheels, please follow the instructions above. The castors must be round and they should have no abnormal abrasion.

- Remove load from table and when servicing lifter, please use safety stopper to prevent table from lowering.

- DAILY:** Check the items emphasized in daily inspection (chapter 5).
- MONTHLY:** Lubricate with grease the rails where roller moves. Also lubricate with grease the nipples.
- EVERY SIX MONTH:** Lubricate all the pivoting points and axles.
- EVERY TWELVE MONTH:** Replace the hydraulic oil.

The required hydraulic fluid- type is YA-N46, the viscosity is 41.4-50.6

Table 3: Amount of oil

Type	TF 15	TF 30	TF 50	TFD 35	TF 75	TFD 70	TF 100	TG 50	TG 100
Amount	0,21	0,24l	0,24l	0,24l	0,4l	0,47l	0,41l	0,35l	3l

- For refilling the hydraulic fluid, a ventilation screw on the upper side of the cylinder is equipped.
- For this please call your next service.
- Caution is called for working with the lifting mechanism.

Waste material like oil or other must be probably disposed and recycled according to the national regulations and if necessary brought to a recycling company.

Before starting operating the lifting table check, if all markings and decals are in the right place and not damaged (acc. to chapter 2 c.). If necessary replace the decals.

8. TROUBLE SHOOTING



Table 4: Trouble shooting

TROUBLE	CAUSE	REPAIR
Table does not rise	Faulty foot pedal (6)	Check and if necessary repair or replace the mechanical connections of the lifting pedal.
	Oil leakage from Cylinder (3)	Replace sealing.
	Faulty lifting mechanism (2)	Check and repair the lifting mechanism.
Vertical creep of table	Oil leakage in the lowering valve. Oil leakage from hydraulic circuit	Replace the lowering valve. Check hydraulic circuit and repair.
Oil leakage from cylinder	Faulty sealing.	Replace sealing.
Oil leakage from piping or joint,	Insufficient tightening.	Tighten joint again.
Oil leakage from air breathing	Excessive quantity of oil.	Reduce oil quantity.
Table does not lower	Lowering cable disconnected Lowering turning handle disconnected	Connect and adjust the cable. Repair the turning handle

9. HYDRAULIC CIRCUIT

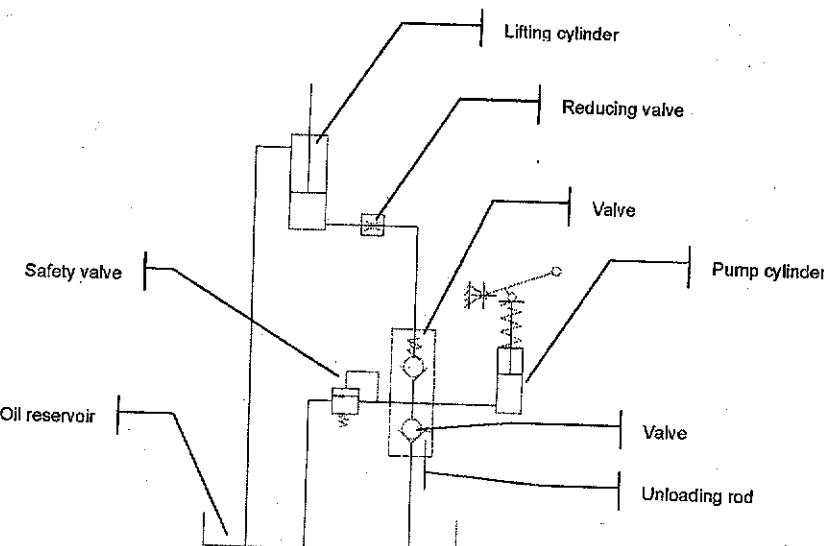


Fig. 7: Hydraulic circuit

10. DECLARATION OF CONFORMITY (valid, if sold within the EU)

[BG] CE Declaration of Conformity

The signatory hereby declares that the machine described below in detail complies with the European Directive 2006/42/EC (Machinery Directive) including amendments as well as the legislative decree to incorporate the directives in national law. The signatory is individually authorized to compile the technical documents.

[DE] EG-KONFORMITÄTSERKLÄRUNG

Der Unterzeichner bescheinigt hiermit, dass die im Einzelnen bezeichnete Maschine den Europäischen Richtlinien 2006/42/EG (Maschinenrichtlinie) einschließlich deren Änderungen sowie dem entsprechenden Rechtsverfahren zur Umsetzung der Richtlinien in nationales Recht entspricht. Der Unterzeichner ist bevollmächtigt, die technischen Unterlagen zusammenzustellen.

[ES] DECLARACIÓN DE CONFORMIDAD CE

El signatario certifica por medio de lo presente que la máquina descrita en esta documentación cumple con la Directiva Europea 2006/42/CE (Directiva de máquinas), incluyendo sus respectivas modificaciones, así como con los Reales Decretos de transposición de la directiva al derecho nacional. El signatario dispone de una autorización individual que le permite compilar la documentación técnica.

[FR] DECLARATION DE CONFORMITE CE

Les signataires certifient par la présente que les machines désignées individuellement satisfont aux directives européennes 2006/42/CE (directive signalées), y compris leurs modifications ainsi que les décrets légaux concernant la mise en œuvre des directives dans le droit national. Les signataires sont respectivement et individuellement autorisés à regrouper les documents techniques.

[NL] EG-KONFORMITEITSVERKLARING

De ondertekenaars verklaart hiermee, dat de hieronder genoemde machine voldoen aan de Europese richtlijnen 2006/42/EG (Machinerichtlijn), inclusief de wijzigingen en wetgeving voor de omzetting van de richtlijnen in nationaal recht. Ondergetekenden zijn ledet individueel gemachtigd het technisch dossier samen te stellen.

[PT] DECLARAÇÃO DE CONFORMIDADE CE

Os signatários vêm por este meio certificar que os a máquina descritos em pormenor cumprem as directivas europeias 2006/42/CE (directiva relativa a máquinas) incluindo as suas alterações e o respetivo documento legal com vista ao cumprimento das directivas no enquadramento legal nacional. Os signatários estão individualmente autorizados a compilar os documentos técnicos.

[IT] DICHIARAZIONE DI CONFORMITÀ CE

Con la presente i firmatari attestano che la macchina per movimentazione interna è conforme alla direttiva europea 2006/42/CE (Direttiva Macchine), comprese le relative modifiche, nonché al documento legale per la trasposizione di tali direttive nel diritto nazionale. I sottoscritti sono singolarmente autorizzati alla creazione della documentazione tecnica.

[RU] ЕВРОПЕЙСКА ОБЩНОСТ - ДЕКЛАРАЦИЯ ЗА СЪОТВЕТСТВИЕ

С настоящото подписване удостоверяват, че специфицираното тук машината средство отговаря на Европейските директиви 2006/42/ЕО (директива за машини), включително на техните изменения, както и на съответното постановление за прилагане на директивите в националното право. Подписватите са съответно утвърдени поотделно да съставят техническата документация.

[CZ] EG - PROHLÁŠENÍ O SHODE

Níže podepsaní tímto potvrzují, že podrobný popis stroje odpovídá Evropským směrnicím 2006/42/EC (směrnice pro strojní zařízení) ve všech jejich požadavcích, jakob i příslušném právním výnosům pro uplatnění příslušné směrnice v rámci národního práva. Každý z podepsaných je jednotlivě způsobil k vytváření technických podkladů.

[DK] EF-OVERENSSTEMMELSESERKLÄRING

Undertegnede erkänner hermed, at følgende maskine overholder de væsentligste krav i Rådets direktiv 2006/42/EF (Maskindirektivet) om indbyrdes tilhængelse af medlemsstaternes lovgivning. Alle undertegnede har fuldmagt til selvstændigt at sammenstille det tekniske materiale.

[EST] EL vastusavaldus

Настоящим лицом, подписавшим документ, удостоверяют, что полностью подъемно-транспортное средство с силовым приводом в указанной спецификации соответствует Европейским директивам 2006/42/EG (Директива по машинам), включая изменения в них, а также соответствующему правовому документу по трансформации директив в национальное право. Каждое по отдельности лицо, подписавшее документ, имеет полномочия для составления технической документации.

[FIN] EU-YHDENMUKAISUUSSELOSTUS

Allekirjoittavat todistavat täten, että yksilöön/kone vastaa eurooppalaisia direktivejä 2006/42/EY (konedirektiiviä) kaikkine mukautuksineen sekä säädökksiä, joihin se soveltuu.

[GR] ΔΗΛΩΣΗ ΣΥΜΜΟΡΦΩΣΗΣ ΕΟΚ

Οι υπογράφοντες βεβαιώνουν ότι της παρούσας όπι το συγκεκριμένο μηχάνημα συμμορφώνεται προς την Κοινωνική Οδηγία 2006/42/EK νομοθεσία. Οι υπογράφοντες είναι σε κάθε περίπτωση εξουσιοδοτημένοι απόκτιμα καταρτίσουν τα τεχνικά έγγραφα.

[HU] EU KONFORMITÁSI NYILATKOZAT

Auillrottak ezennel igazolják, hogy a részleteiben leírt, a gép megfelel a 2006/42/EK (Gép Irányelv) Európai Irányelvnek, beleérve azok módosításait, valamint az irányelv nemzeti jogba törénő általánosságára Irányelv, megfelel jogi rendelkezést. Továbbá az auillrottak mindenkorától meghatalmazásossal arra nézve, hogy összehillítják a műszaki dokumentációt.

[LT] ES atitikimimo deklaracija

Zemiau pabrėžiu asmenys patvirtinu, kad atskirai aprašytas mašina atitinka Europos Sajungos direktyva 2006/42/EB (Mašinų direktyva), išskaitant ir įgaliojus sudarytį techninius dokumentus.

[LV] ES atbilstības deklarācija

Ar šo ziņojumu parakstījušās personas apliecinā, ka detalizēti aprakstītās mašīna atbilst Eiropas Savienības direktīvām 2006/42/EC (Mašinu direktīva), piemērotas sastādītās tehniskās dokumentācijas dokumentācijas.

[NL] EU-KONFORMITEITSVERKLARING

Undertegnede bekræftes hermed at de enkelte begrundede maskin med kraftdrift overensstemmer med de europæiske retningslinjene 2006/42/EC bemyndiget til at sammenstille de tekniske dokumentene.