



STEP 1: Make sure to check the ball connection is compatible with your hose fitting prior to installation. Apply a small amount of grease to both fitting connection and ball connection end of the grease needle applicator.



STEP 2: connect bottom of needle to hand operated grease gun hose. Best method is to position the ball end of the needle applicator at a slight angle and press firmly.



STEP 3: If installed correctly the ball end should be fully enclosed in the fitting and is seated firmly. Needle applicator should be able to swivel in position without falling out of fitting.
Once you remove the plastic protective cover of the needle from the grease applicator, it is now ready to use.



STEP 4:

- A** To apply grease insert the needle into the edge or narrow opening of the swivel race where grease is required.
- B** To apply grease, insert needle inbetween the protective head seal fitted to your castor fork.