




**Step 1.** Assemble the trolley ends using the cross bars and end posts provided.

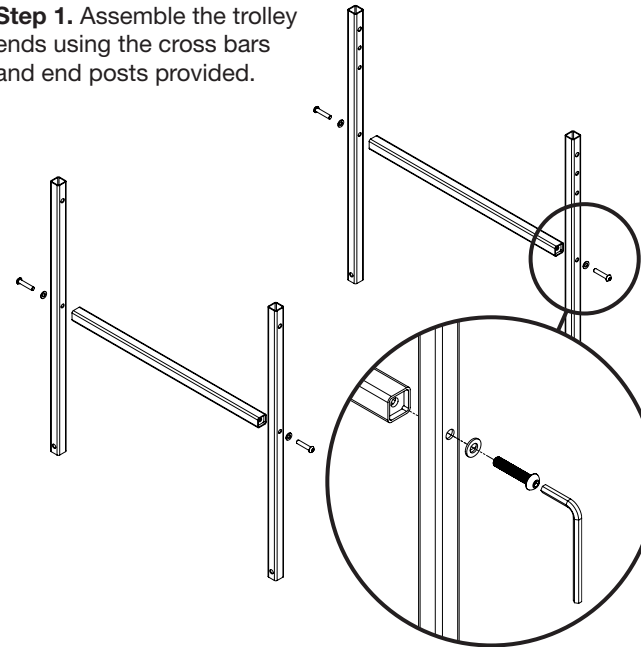


**Step 2.** Attach the top shelf and handle to the assembled frames

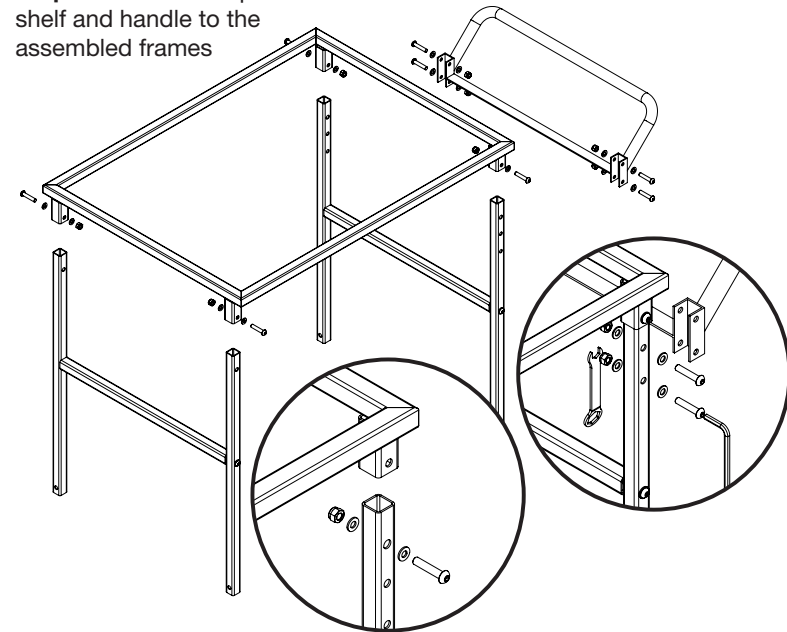


## Parts List

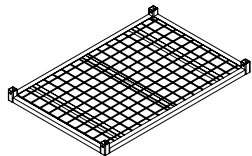


Trolley base x1

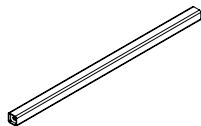


Cross bar x2

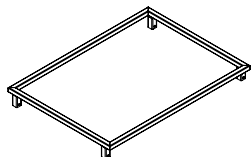

Top deck x1

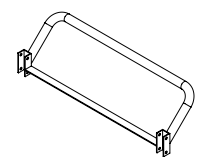


Handle x1



End Post x4




Swivel castor x2




Swivel castor with brake x2




M12 x 40mm  
hex bolt  
x4




M8 flat  
washer x28




M12 spring  
washer x4




M8 nylon  
lock nut x12



M8 x 40mm  
pan head cap  
screw x16

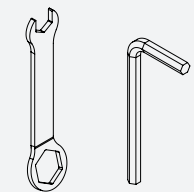


M8 & M12  
wrench x1



M8 hex  
key x1

**Step 3.** Attach the castors to the base of the trolley.

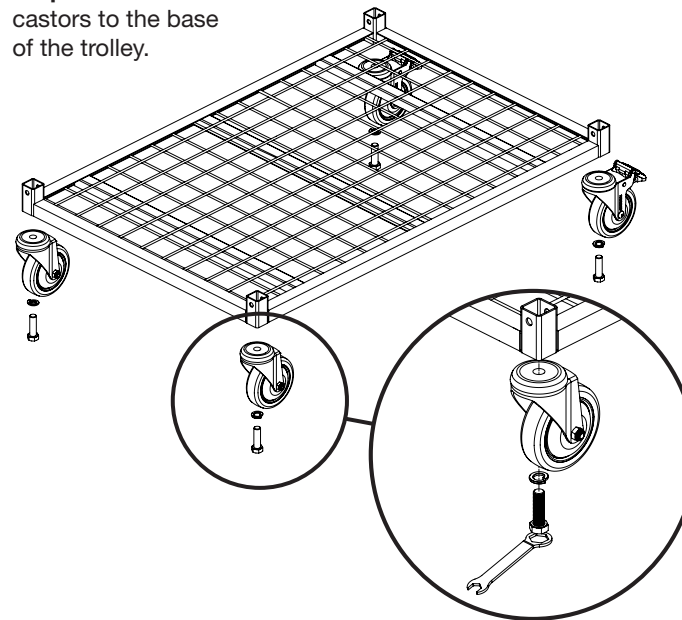

**Step 4.** Attach the frame assembly to the trolley base.

