


**PLEASE NOTE
BEFORE ASSEMBLY:**

1. Read these instructions carefully
2. Please identify the front and back of the top/middle/bottom shelves.
3. Please identify the top and bottom of the back/side panel


Tools Required: Rubber mallet

KIT CONTENTS

- | | |
|------------------------------|------|
| 1. Handle | 2pcs |
| 2. Top Shelf | 2pcs |
| 3. Side Panel | 4pcs |
| 4. Middle Shelf | 1pc |
| 5. Back Panel | 2pc |
| 6. Aluminium Corner Supports | 8pcs |
| 7. Bottom Shelf | 1pc |
| 8. Castors | 4pcs |

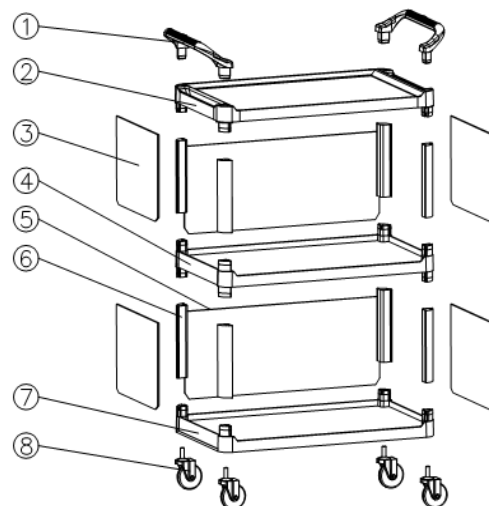


- 1** Place the bottom shelf on a flat surface and attach 4x aluminium corner supports to each corner of the bottom shelf

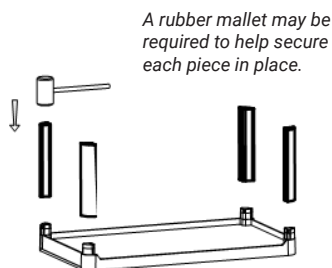


- 2** Slide in the back panel and the 2x side panels into the grooves on each of the aluminium corner supports.

Please note: the chamfered (angled) edge of the back and side panels should be facing down towards the base of the trolley when inserted.

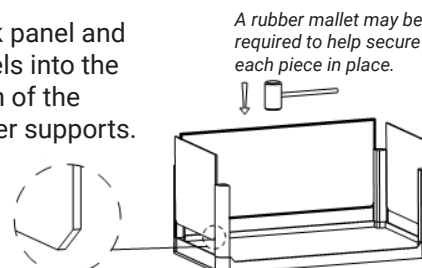


- 3** Attach the middle shelf to the base and then attach the next 4x aluminium corner supports.

A rubber mallet may be required to help secure each piece in place.

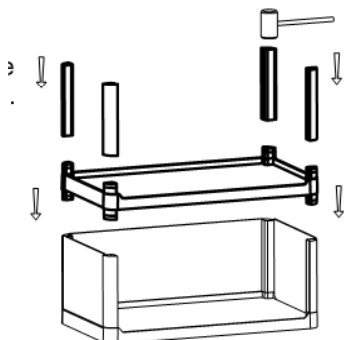


- 4** Attach the middle shelf to the base and then attach the next 4x aluminium corner supports.

Please note: the chamfered (angled) edge of the back and side panels should be facing down towards the base of the trolley when inserted.

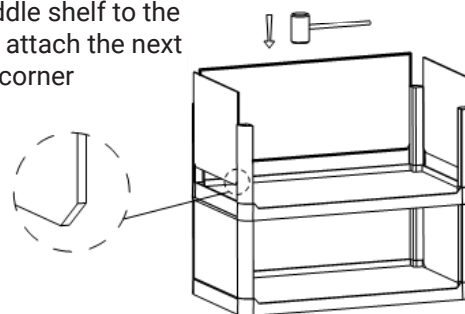


- 5** Attach the top shelf to the assembled trolley frame.

A rubber mallet may be required to help secure each piece in place.

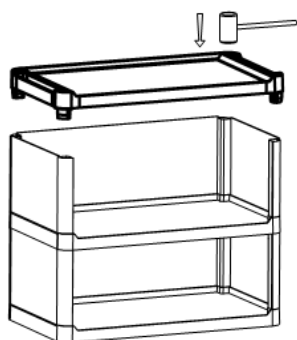


- 6** Flip the assembled trolley upside down. Using a spanner, attach the four bolt-mounted castors to the base (bottom shelf).

Note: Tighten each castor firmly to ensure they remain secure and provide a long service life.

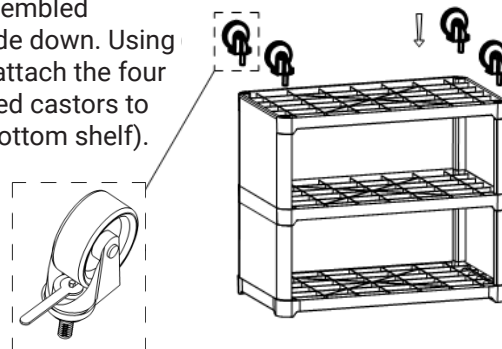

- 7** Flip the trolley over again and attach the 2x handles


A rubber mallet may be required to help secure each piece in place.

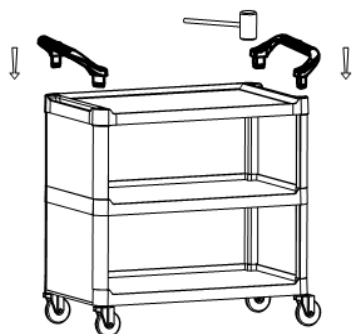

- 8** The base trolley is now assembled.



- 9** Insert each door panel onto the shelf at about an 30 degree incline, and then pull it straight to move into place. Repeat for each door, ensuring the handles face towards the centre.

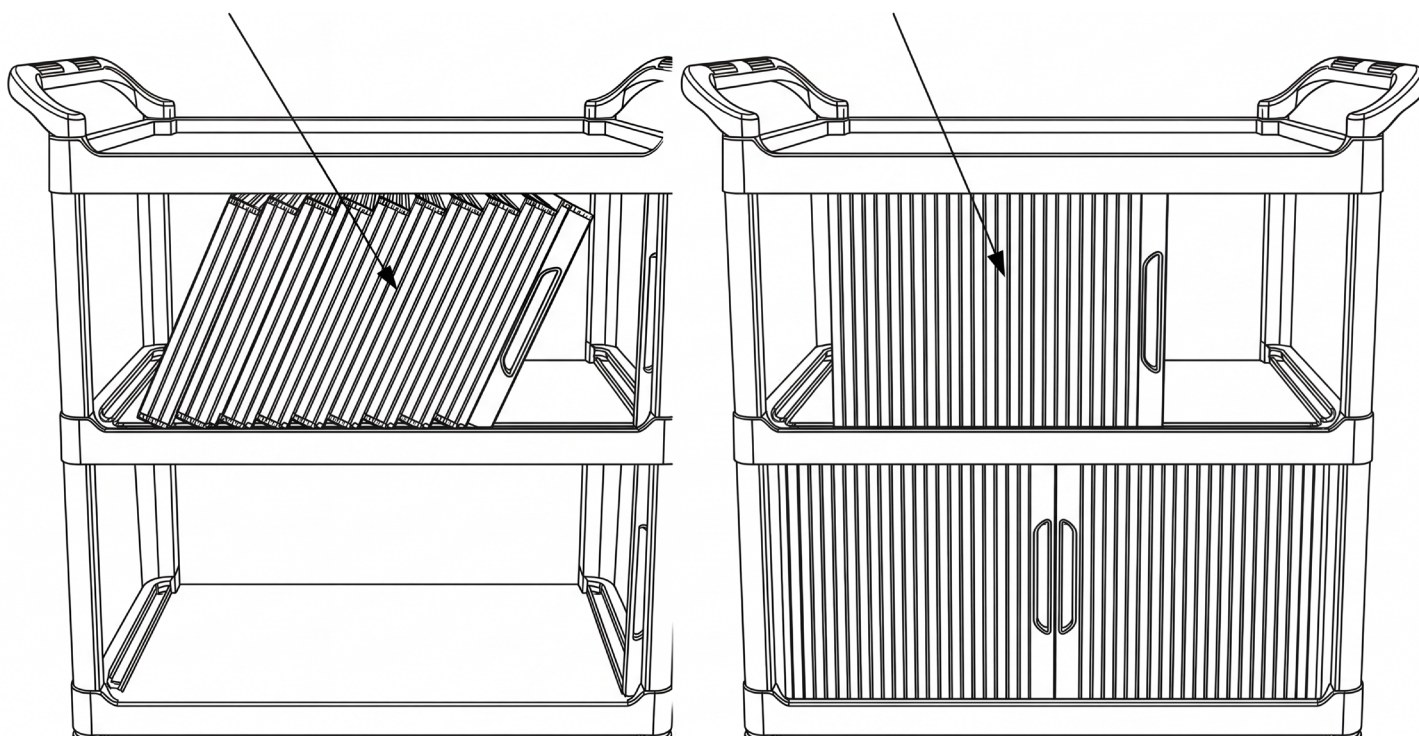

- 10** After installing the left- and right-hand doors on each shelf, insert a screw and bolt into each of the positions shown below and tighten securely. This prevents the doors from opening too far or being easily removed.

