


3 Tier 900 x 600mm Platform Trolley (PFR130)




STEP1:

INSTALL CASTERS TO BASE USING M8 HEX HEAD BOLTS

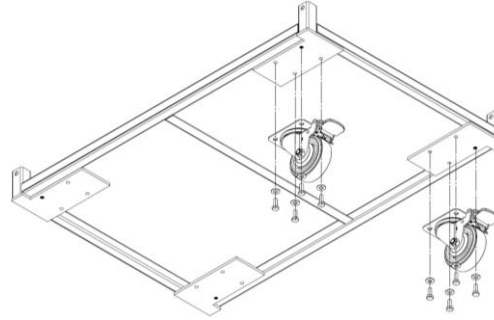


STEP3:

PUT THE FRONT BRACK AND REAR BACKET IN TO THE BASE POND

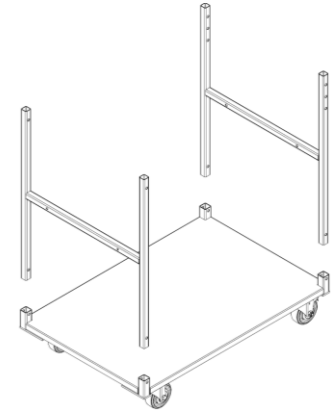


STEP2:

INSTALL RIGID CASTERS TO BASE USING M8 HEX HEAD BOLTS

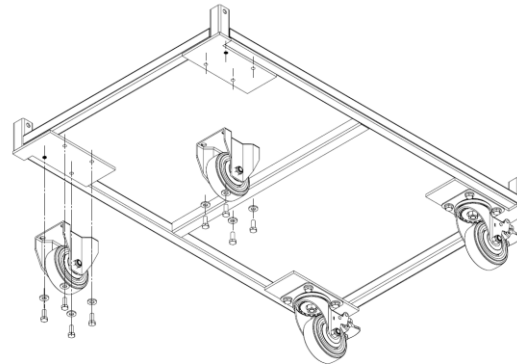


STEP4:

FIX THE BRACKET TO THE FRONT BRACKET AND REAR BRACKET USING M10 ROUND HEAD BOLTS, WASHERS, AND NUTS. INSERT THE BOLT THROUGH BOTH BRACKETS AND TIGHTEN SECURELY.

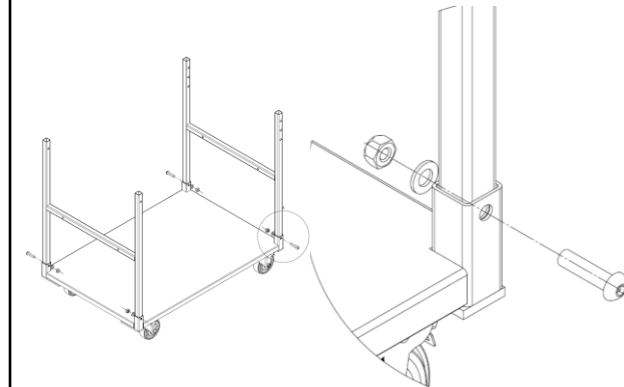


PART LIST CHECK:

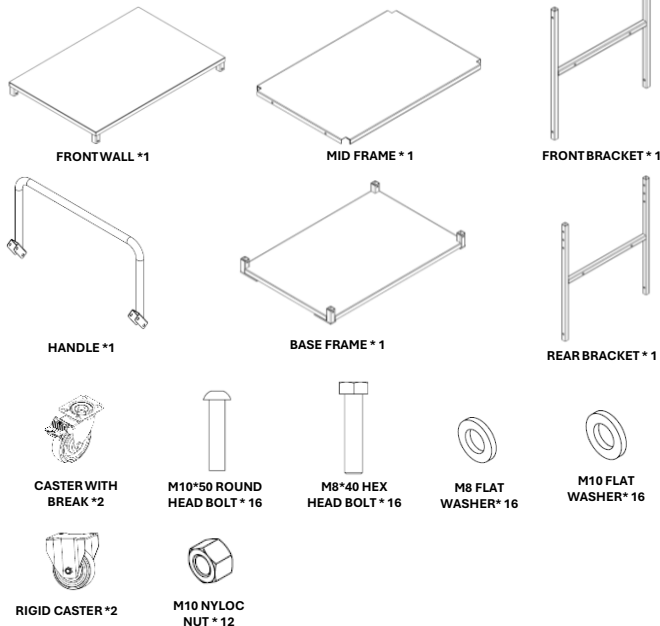

3 Tier 900 x 600mm Platform Trolley (PFR130)


STEP5:

PLACE THE MIDDLE FRAME ONTO THE HORIZONTAL SUPPORT BARS OF THE BRACKETS. ENSURE THE FRAME IS POSITIONED EVENLY AND SITS SECURELY IN PLACE.

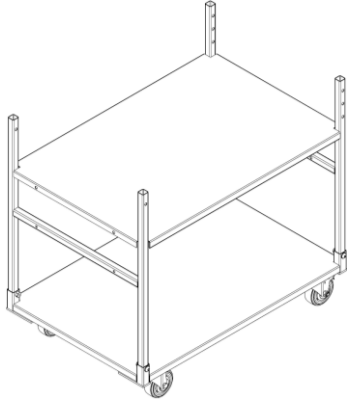


STEP7:

INSTALL THE HANDLE TO THE FRAME USING M10 ROUND HEAD BOLTS, WASHERS, AND NUTS. ALIGN THE HANDLE WITH THE MOUNTING HOLES AND TIGHTEN SECURELY.

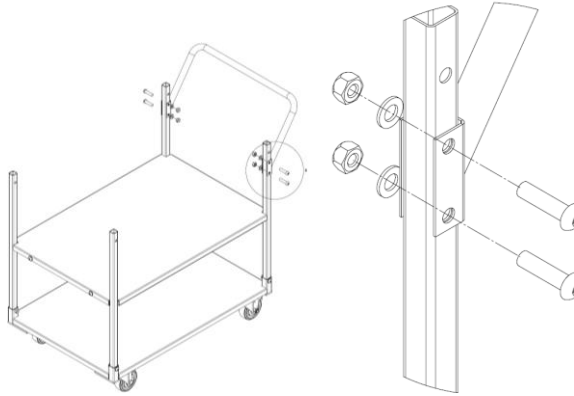


STEP9:

SECURE THE TOP FRAME TO THE BRACKETS USING M10 ROUND HEAD BOLTS, WASHERS, AND NUTS. ENSURE ALL BOLTS ARE FULLY TIGHTENED AND THE TOP FRAME IS FIXED SECURELY IN POSITION.

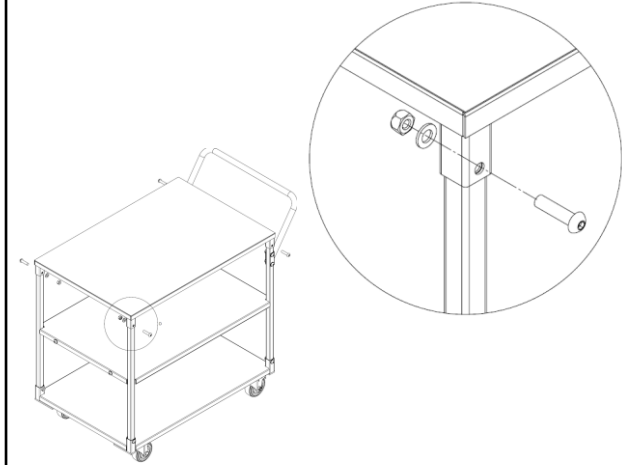

STEP6:

INSTALL THE OPEN SIDE TOP PANEL AT AN ANGLE. ENGAGE THE REAR PINS FIRST, THEN LOWER THE FRONT SIDE INTO POSITION AND ALIGN THE PANEL CENTRALLY. SECURE THE PANEL USING M10 ROUND HEAD BOLTS, WASHERS, AND NUTS.

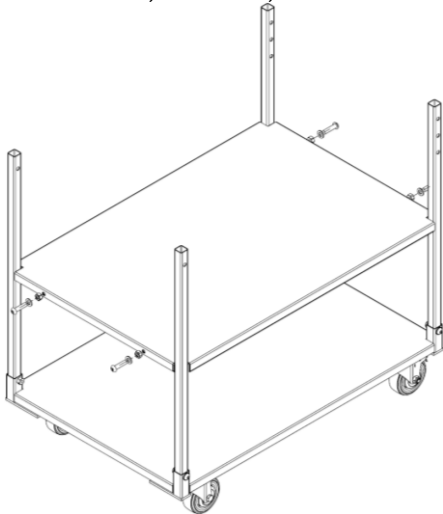

STEP8:

PLACE THE TOP FRAME ONTO THE BRACKETS. ENSURE ALL MOUNTING POINTS ARE ALIGNED CORRECTLY AND THE FRAME SITS SECURELY IN POSITION.

