




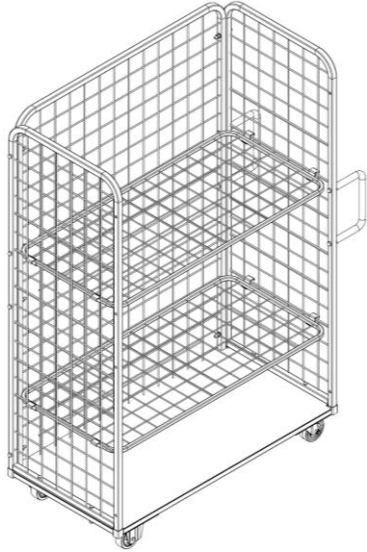


STEP1:
PLACE THE BASE ON THE GROUND WITH THE FLAT
PANEL FACING THE CEILING.

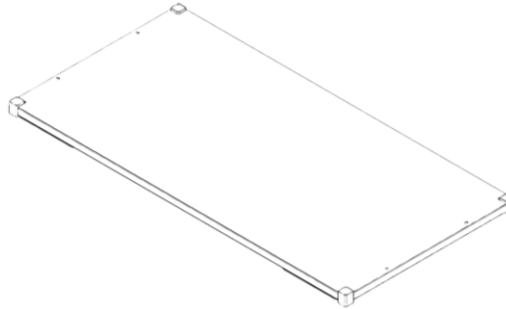


STEP3:
INSTALL THE SIDE FRAME BY ALIGNING ALL HOLES
WITH THE CORRESPONDING HOLES ON THE REAR
FRAME. SECURE THE ASSEMBLY USING M10 X 80 HEX
BOLTS, M10 FLAT WASHERS, AND M10 HEX NUTS.
TIGHTEN ALL FASTENERS SECURELY. (ENSURE HEX
BOLT POINT INTO THE CAGE)

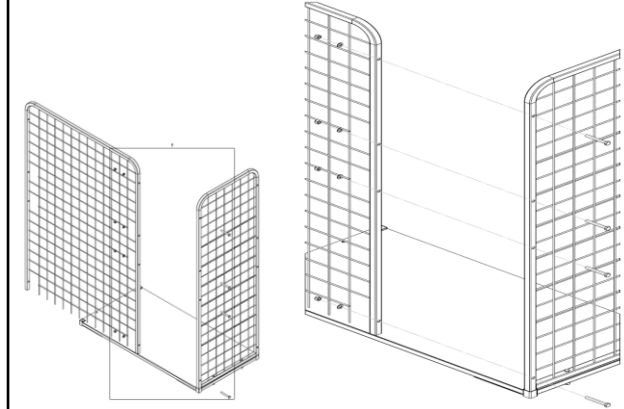


PART LIST CHECK:

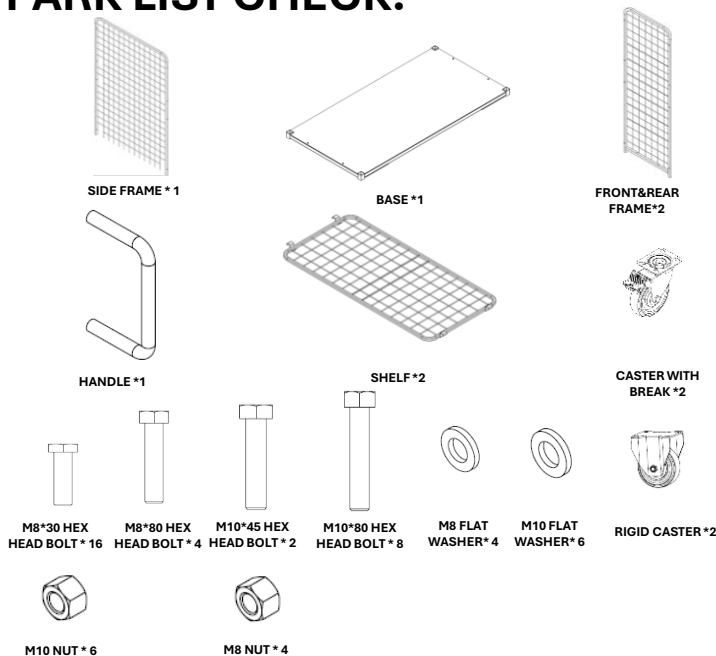


STEP2:
POSITION THE FEET OF THE REAR FRAME INTO THE
SQUARE TUBES ON THE BASE. SLIDE THE REAR
FRAME FULLY INTO THE BASE TUBES, THEN SECURE
IT USING M8 X 80 HEX BOLTS, M8 FLAT WASHERS,
AND M8 HEX NUTS. TIGHTEN ALL FASTENERS

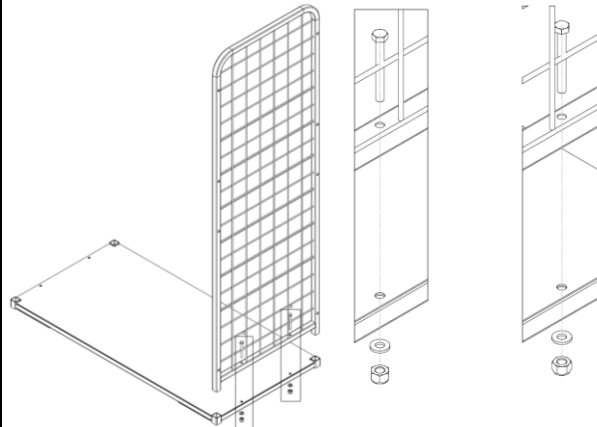


STEP4:
PLACE ALL SHELVES INTO THE FRAME AND HANG
THEM ON THE EXISTING FRAME. ENSURE ALL
SHELVES ARE HUNG AT THE DOUBLE-WIRE LEVEL.

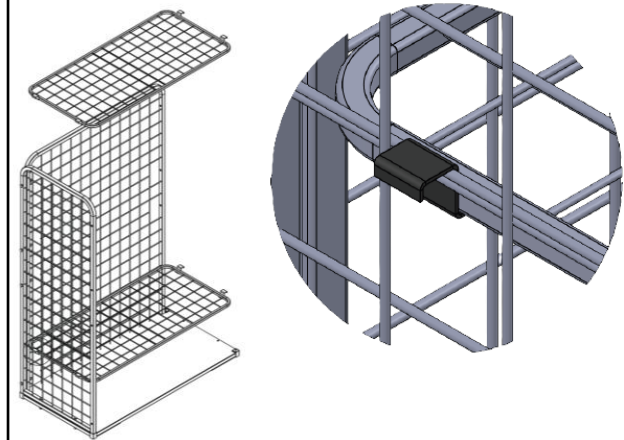


STEP5:
POSITION THE FEET OF THE FRONT FRAME INTO THE SQUARE TUBES ON THE BASE. SLIDE THE REAR FRAME FULLY INTO THE BASE TUBES, HANG THE OTHER SIDE OF THE SHELVES ON . THEN SECURE IT USING M8 X 80 HEX BOLTS, M8 FLAT WASHERS, AND M8 HEX NUTS. TIGHTEN ALL FASTENERS

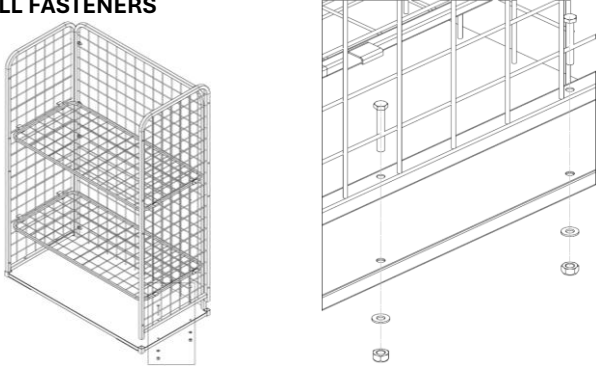


STEP7:
INSTALL THE HANDLE (SAME SIDE AS THE SIDE FRAME) USING M10 X 80 HEX BOLTS.(ENSURE BOLT POINTING TO HANDLE)

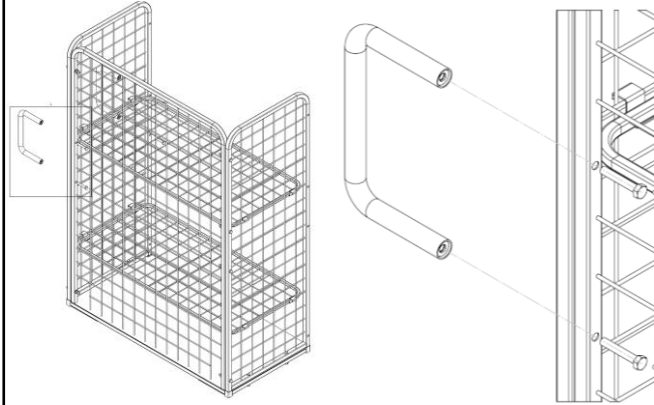


STEP9:
USING M8 X 30 HEX BOLTS, INSTALL THE SWIVEL CASTORS AT THE SAME END AS THE HANDLE.

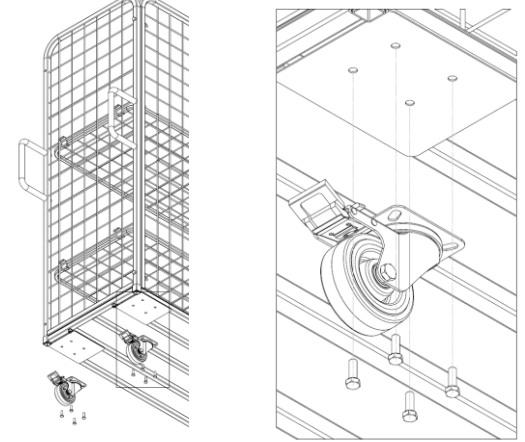

STEP6:
INSTALL THE SIDE FRAME BY ALIGNING ALL HOLES WITH THE CORRESPONDING HOLES ON THE FRONT FRAME. SECURE THE TOP AND BOTTOM HOLES USING M10 X 80 HEX BOLTS, M10 FLAT WASHERS, AND M10 HEX NUTS. TIGHTEN ALL FASTENERS SECURELY. (ENSURE HEX BOLT POINT INTO THE CAGE)

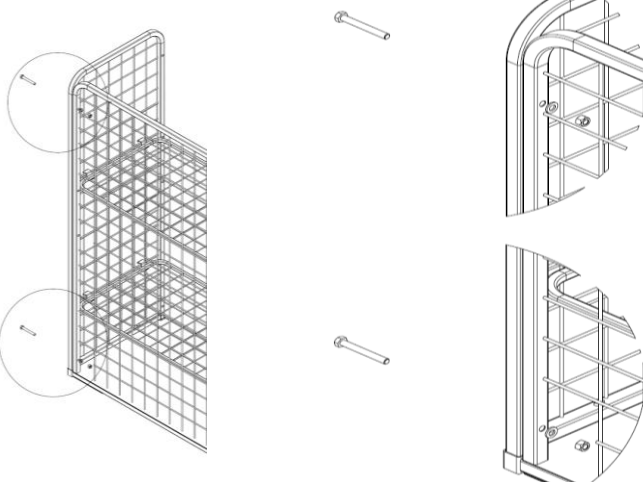

STEP8:
INSTALL THE HANDLE OPEN SIDE) USING M10 X 40 HEX BOLTS.(ENSURE BOLT POINTING TO HANDLE)

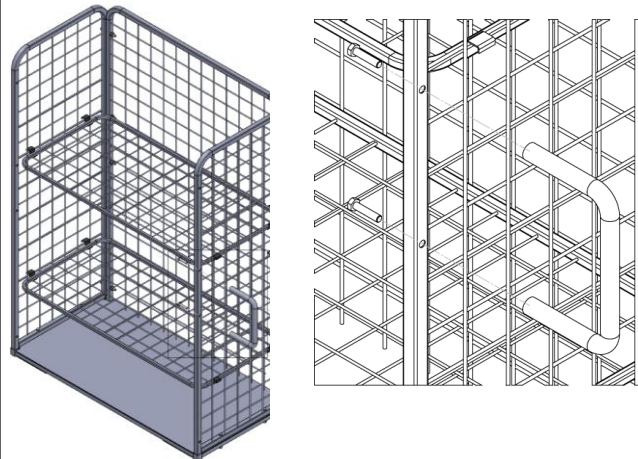

STEP10:
USING M8 X 30 HEX BOLTS, INSTALL THE RIGID CASTORS AT THE OPPOSITE END FROM THE HANDLE.

